

MONTERINGSANVISNING STYRPULPET FÖR STUVLÅDA TILL 400 SPORTSMAN

Art nr 716 400 Styrpulpets med styrrör för låda (rattkonsoll och kabelstyrning)



- 1 Montera styripulpeten på stuvlådan med 4st M6x20 skruv i befintlig hålbild.
- 2 Fäst styrkabeln med klammer i befintlig skruv i relingen.


Detta finns packat!

Styrpulpets	1 st
Ratt	1 st
Klammer	1 st
Skruv MRT M6x20	4 st

Fakta

Styrkabelns längd: 3,25m
Reglagekablarna: 2,75m
(2st, tillkommer)

Blå = Yamaha
Orange = Mercury/Mariner
Grön = Suzuki
Lila = Honda
Gul = TFX 700

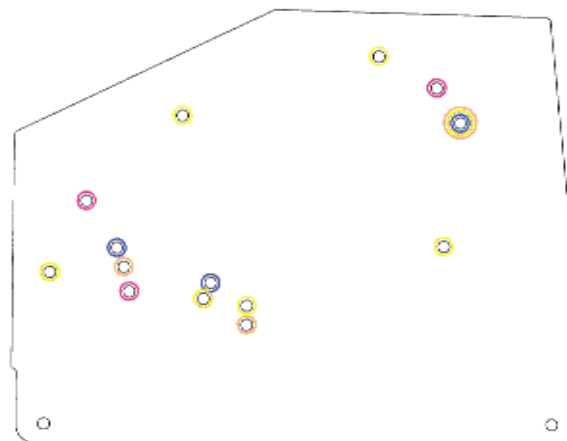

Styrpulpets högra sida, där reglage monteras.

MOUNTING INSTRUCTIONS STEERING CONSOLE FOR STOW BOX FOR 400 SPORTSMAN

Art no 716 400 Steering console with steering cable for stow box



- 1 Mount the steering console on the stowbox with 4 screws M6x20 in the existing holes.
- 2 Fix the steering cable with clip in existing screw of the gunwale.


Contents!

Steering Console	1 pce
Steering Wheel	1 pce
Clip	1 pce
Screws MRT M6x20	4 pcs

Data

Length of steering cable:
3.25m
Control cables: 2.75m
(2 required)

Blue = Yamaha
Orange = Mercury/Mariner
Green = Suzuki
Purple = Honda
Yellow = TFX 700

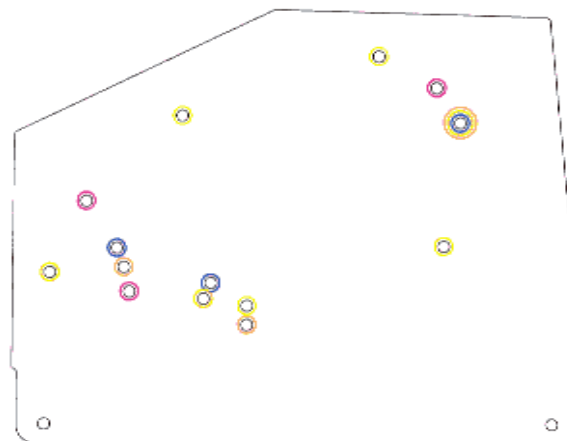

Right-hand view of steering console,
where the controls are mounted.